

YO-YODESK®

Work Well. Live Well.

UNO 1 - Handset Instructions

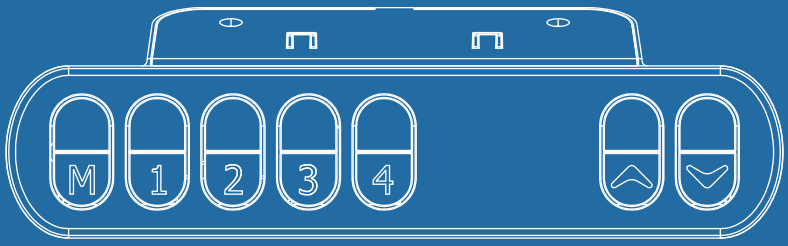

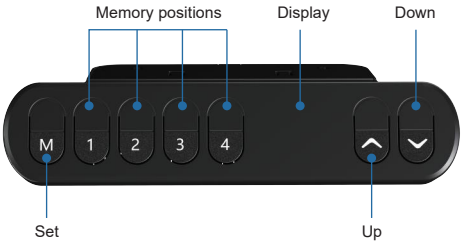

Handset instructions

Operation of the desk

- Press «↑» to move the desk up;
- Press «↓» to move the desk down.

Setting the memory function

1. Move the desk up or down to the desired position;
2. Press «M», then press «1» to save position 1;
3. Repeat the procedure to save the other positions. (4 memory positions in total)

The memory positions are not lost when the power is turned off.

Initialization of the system (reset)

1. Press and hold «↓» until the frame has reached the lowest position;
2. Release the button, then press and hold «↓» for 5-10 seconds until you hear a beep.
3. Then release and hold «↓» until you hear a beep. The frame has been reset successfully.

Lock minimum or maximum height

1. Place the desk at the desired minimum/maximum height;
   - The desk is locked at a minimum height when the height is less than 50% of the total height.
   - The desk is locked at a maximum height when the height is more than 50% of the total height.
2. Now lock this height by pressing «↑» and «↓» together for 5 seconds;
3. You can remove the lock by pressing and holding «↑» & «↓» together for 5 seconds.

The lock can also be removed by preforming a reset.

Lock and unlock the desk

- Press «M» and «↑» together for 5 seconds to lock the handset. Loc will appear on the display.
- Press «M» and «↓» together for 5 seconds to unlock the handset. Loc will disappear from the display

Caution:
- This product must comply with the technical parameters (see label control box);
- Keep the product away from water and corrosion-resistant gas;
- Is there a problem with the product? Please contact the point of sale.

Standing reminder

To activate timer, press «1» and «3» together, the display shows «0.0h».
Then press «↑» or «↓» to adjust the timing.
Timer can be adjusted per half an hour(0.5)

- When the handset is in sleep mode a flashing dot indicates that the timer is running.
- When the timer has reached the programmed time a buzzer will sound five times and the handset will wake up from sleep mode.
- Now select the desired height by using «↑» or «↓» button.

User settings

The user can choose to change the desk's default settings. In total there are 6 settings that can be changed. These are numbered in the following order S1 to S-6.

You can change the settings by pressing «M» for 15 seconds. Then select which setting you want to change, using «↑» and «↓». Then press «M» again to select the selected user setting. Select the desired setting and confirm it by pressing «M».

S1) CM or INCH

1. Press «M» when on S-1;
2. Then use «↑» or «↓» to select 1 or 0; (0 = CM & 1 = INCH)
3. To save, press «M» again.

S2) Adjust anti-collision sensor sensitivity

1. Press «M» when on S-2.
2. 0: means off, 1: is the least sensitive and 8: is the most sensitive.
3. To save, press «M» again.

S3 & S4) Safety setting, do not adjust before consultation with a professional.

S5) Determine the minimum height display

1. Press «M» when on S-5.
2. Select the minimum height that will be showed on the display.
3. To save, press «M» again.

S6) Determine automatic or manual operation of memory buttons

1. Press «M» when on S-6.
2. 0: means manual placement to the selected height. Keep button 1, 2, 3 or 4 pressed for desired height.
   1: means automatic placement to the selected height. Click button 1, 2, 3 or 4 for desired height.
3. To save, press «M» again.